



INSTRUCTIONS AND USER GUIDE

Item No. 100907

**Hard-Wired ELD Kit with Key Lock
Cradle for Galaxy Tab Active3 |
Active5**

Samsung Galaxy Tab Active2
Samsung Galaxy Tab Active3
Samsung Galaxy Tab Active5

 


DO NOT attach anything to the mount face plate until after installing the mount to the dashboard. Doing so makes it more difficult to install the mount to the dash.

Item No. 100907



Make sure you can get access from behind (to attach the backing plate) by removing the necessary dash panels.

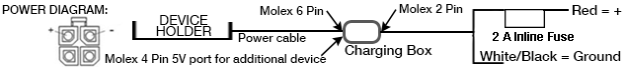

Attention:

Carefully read all instructions and review the images before installing this product. **Do not** attach anything to the mount face plate until after installing the mount to the dashboard. Doing so makes it more difficult to install the mount to the dash. **Also**, our installation instructions are often printed prior to the last year of a ProClip mount listing. The year listing we show on our web site should be the most accurate listing.

Important

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. ProClip USA, LLC. shall have no liability for damage or injury resulting from the installation or use of any ProClip or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. ProClip USA, LLC. product warranties do not cover the installation, removal or reinstallation of any product.



STEP 1 OF 8

To attach the pedestal:

Find a good mounting position on your dashboard. Make sure you can get access from behind (to attach the backing plate) by removing the necessary dash panels. Ensure there are no wires behind the mounting spot.

Using the pedestal as a template mark the holes on the dash, or dash panel as shown in picture. Then drill the holes large enough for M4 screws to go through.



STEP 2 OF 8

Line up the pedestal and the backing plate with the drilled holes. Secure in place using the enclosed screws and locking nuts.



STEP 3 OF 8

To mount the cradle:

To mount the cradle WITH the Tilt-Swivel; undo the center screw on the cradle. Remove the Tilt-Swivel Base Plate from the back and attach it to the pedestal face plate using the enclosed screws. Re-attach the cradle using the center screw.



STEP 4 OF 8

If you prefer NOT to use the Tilt-Swivel remove it by undoing the four screws on the face of the cradle. Then mount the cradle directly to the pedestal. (screws for mounting the cradle directly are not included and will need to be obtained separately)



STEP 5 OF 8

Inserting the Tablet:

Align the bottom of the tablet with the docking connector for the tablet. Allow the tablet to seat to the bottom of the holder.



STEP 6 OF 8

Locking the Tablet:

Press the top of the tablet to snap the top support into place.

Slide the key lock down over the tablet and press the center pin to lock the tablet into the cradle.



STEP 7 OF 8

Unlocking the Tablet:

To unlock the sliding lock, insert the key and turn until the center pin pops out. Slide the lock up and past the edge of the tablet to allow clearance for removal. Using a thumb or additional hand, slightly lift the top support up and pull the tablet towards you.



STEP 8 OF 8

Removing the Tablet:

Once free from the top support, lift up and away from the bottom of the holder to free the tablet.

Returns

All returns must be made within thirty (30) days of the delivery date and include proof of purchase, a copy of your original order, or invoice. No products shipped hereunder may be returned without ProClip USA's prior approval. In order to return a product, the buyer must obtain an RMA number (Return Merchandise Authorization Number). Items returned without a valid RMA number may be rejected. **Items that are open, used, damaged, or returned without all original components may have a restocking fee applied.**

Limited Warranty and Liabilities

ProClip warrants that the Products will be free of defects in materials and workmanship for a period of one (1) year from the date of purchase. If any Product should become defective within the warranty period, ProClip, at its option, will replace it, repair it or refund the purchase price. Repair or replacement parts or Products will be furnished on an exchange basis and will either be new or reconditioned. All replaced Products shall become the property of ProClip. Warranty service is available to you by delivering the Product during the warranty period to the company it was purchased from or to ProClip at 4915 Voges Rd., Madison, WI 53718 USA and providing proof of purchase, price and date. If shipped to ProClip, the buyer must first call ProClip at +1 800-296-3212 or e-mail ProClip at returns@proclipusa.com to obtain a return approval and return number. You will bear all shipping, packaging and insurance costs and all other costs, excluding labor and parts, necessary to effectuate repair, replacement or refund under this warranty. For more information on how to obtain warranty service, write, e-mail or telephone ProClip at 4915 Voges Rd., Madison, WI 53718 USA. Tel: +1 800-296-3212, e-mail: returns@proclipusa.com. THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCT WHICH HAS BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE OR AS A RESULT OF UNAUTHORIZED SERVICE. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES FOR THIS PRODUCT. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT, SHALL HAVE NO GREATER DURATION THAN 1 YEAR FROM THE DATE OF PURCHASE. IN THE EVENT THIS PRODUCT BECOMES DEFECTIVE DURING THE WARRANTY PERIOD, THE PURCHASER'S EXCLUSIVE REMEDY SHALL BE REPAIR, REPLACEMENT OR REFUND AS PROVIDED ABOVE. IN NO EVENT SHALL PROCLIP BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION LOSS OF PROPERTY, ARISING FROM BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY. PROCLIP DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE SET FORTH ABOVE. IN NO EVENT WILL PROCLIP BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, INDIRECT, SPECIAL, PUNITIVE, OR EXEMPLARY DAMAGES, INCLUDING ATTORNEY FEES ARISING OUT OF THE USE OF OR THE INABILITY TO USE THE PRODUCTS, OR FOR ANY CLAIM BY ANY OTHER PARTY, EVEN IF PROCLIP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Regulatory information: www.proclipusa.com/regulatory.html

ProClip USA, LLC

4915 Voges Road • Madison, WI 53718 • USA
Office: +1 608-807-5230 • Fax: +1 920-372-0066
Toll free: 800-296-3212 • www.proclipusa.com