



INSTRUCTIONS AND USER GUIDE


Item No. 216410

**ModTek Charging Dock for Android
and Windows Devices**



DO NOT attach anything to the mount face plate until after installing the mount to the dashboard. Doing so makes it more difficult to install the mount to the dash.

Item No. 216410

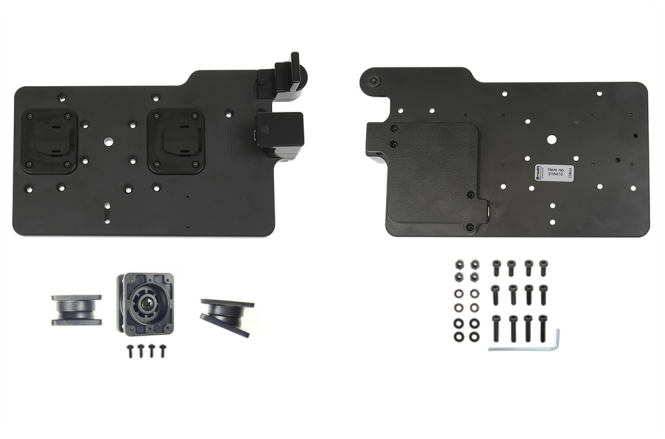


Attention:

Carefully read all instructions and review the images before installing this product. **Do not** attach anything to the mount face plate until after installing the mount to the dashboard. Doing so makes it more difficult to install the mount to the dash. **Also**, our installation instructions are often printed prior to the last year of a ProClip mount listing. The year listing we show on our web site should be the most accurate listing.

Important

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. ProClip USA, LLC. shall have no liability for damage or injury resulting from the installation or use of any ProClip or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. ProClip USA, LLC. product warranties do not cover the installation, removal or reinstallation of any product.

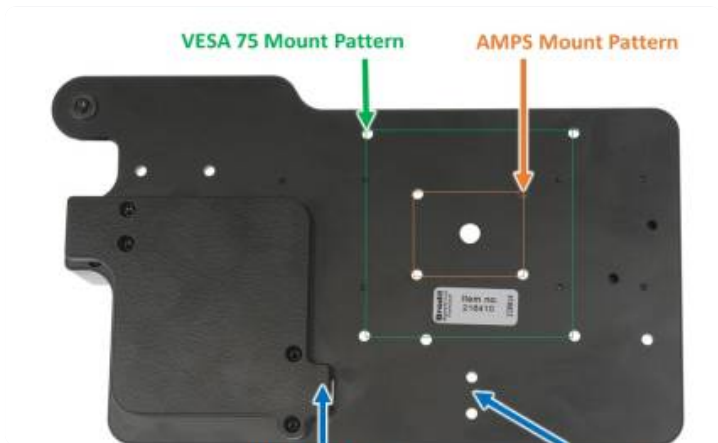

STEP 1 OF 8

Pedestal and Mount Compatibly:

This dock supports the AMPS and VESA75 mount hole patterns to attach of vehicle and desktop mounts.

The back of the dock is where a USB-C 3.1 cable can be plugged in to provide power and data to the tablet. The cable retention holes are for the included zip tie to keep the cable in place.

An optional Tilt-Swivel is included with fasteners to enable the dock to attach to a flat surface and tilt up to 15 degrees.



STEP 2 OF 8

Mounting the Dock:


Using the included M4 fastener pack, attach the ModTek Dock to your selected mount. The example here shows a ProClip Heavy Duty Pedestal that is not included with this product. The included 3 lengths of M4 fastener pack can be used to attach the dock to a variety of vehicle and desktop mounts. (#100223 Fastener Pack Included)



STEP 3 OF 8

Accessing the Dock:

Once the dock is installed it is important to leave approximately 2 inches (50mm) of a gap to allow a ModTek Hard Case to be properly aligned and docked.

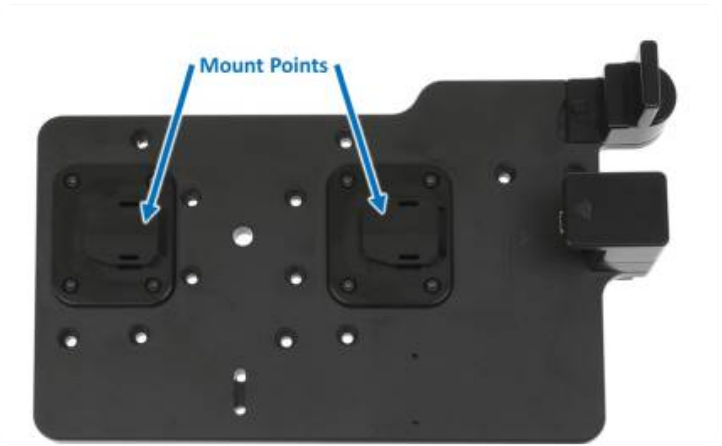

STEP 4 OF 8

Mount Points:

This ModTek USB-C 3.1 Dock supports a variety of devices when installed in the ProClip ModTek Hard Case. The two mount points are used to align the tablet with the USB-C connector to ensure a perfect alignment and ensure the USB-C connection to the tablet does not create excessive wear.



STEP 5 OF 8

Aligning a Hard Case:

The ModTek Hard Case and USB-C Dock include alignment indicators to show you where they should line up with each other for perfect engagement to the mount points. Place your hand on top of the Hard Case and place it onto the dock so both mount points are engaged before attempting to slide the case onto the USB-C connector. NOTE: If only one mount point is engaged the angle will be off when connecting to the USB-C connector and you can damage it permanently. Damage due to incorrect docking is not covered by warranty.



STEP 6 OF 8

Docking onto the USB-C:

Once the Hard Case is aligned by engaging both mount points, smoothly slide the tablet onto the USB-C connector until you hear an audible click. The audible click confirms the case is properly docked. Note: Do not force the tablet onto the connector. If you feel significant resistance the case is not properly aligned. Remove it and ensure alignment on both mount points before continuing.



STEP 7 OF 8

Releasing the Case:

To release the case from the dock, use the quick release dial by turning it clockwise similar to turning a key. This will release the Hard Case and it will slide it slightly off the USB-C connector. Note: It is almost impossible to release the tablet without using the quick release lever and it should not be attempted.



STEP 8 OF 8

Releasing from the Dock:

Switch grip from the quick release dial and place your hand on top of the case. Continue to slide the case until you see the alignment line and then pull the case towards you.

Returns

All returns must be made within thirty (30) days of the delivery date and include proof of purchase, a copy of your original order, or invoice. No products shipped hereunder may be returned without ProClip USA's prior approval. In order to return a product, the buyer must obtain an RMA number (Return Merchandise Authorization Number). Items returned without a valid RMA number may be rejected. **Items that are open, used, damaged, or returned without all original components may have a restocking fee applied.**

Limited Warranty and Liabilities

ProClip warrants that the Products will be free of defects in materials and workmanship for a period of one (1) year from the date of purchase. If any Product should become defective within the warranty period, ProClip, at its option, will replace it, repair it or refund the purchase price. Repair or replacement parts or Products will be furnished on an exchange basis and will either be new or reconditioned. All replaced Products shall become the property of ProClip. Warranty service is available to you by delivering the Product during the warranty period to the company it was purchased from or to ProClip at 4915 Voges Rd., Madison, WI 53718 USA and providing proof of purchase, price and date. If shipped to ProClip, the buyer must first call ProClip at +1 800-296-3212 or e-mail ProClip at returns@proclipusa.com to obtain a return approval and return number. You will bear all shipping, packaging and insurance costs and all other costs, excluding labor and parts, necessary to effectuate repair, replacement or refund under this warranty. For more information on how to obtain warranty service, write, e-mail or telephone ProClip at 4915 Voges Rd., Madison, WI 53718 USA. Tel: +1 800-296-3212, e-mail: returns@proclipusa.com. THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCT WHICH HAS BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE OR AS A RESULT OF UNAUTHORIZED SERVICE. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES FOR THIS PRODUCT. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT, SHALL HAVE NO GREATER DURATION THAN 1 YEAR FROM THE DATE OF PURCHASE. IN THE EVENT THIS PRODUCT BECOMES DEFECTIVE DURING THE WARRANTY PERIOD, THE PURCHASER'S EXCLUSIVE REMEDY SHALL BE REPAIR, REPLACEMENT OR REFUND AS PROVIDED ABOVE. IN NO EVENT SHALL PROCLIP BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION LOSS OF PROPERTY, ARISING FROM BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY. PROCLIP DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE SET FORTH ABOVE. IN NO EVENT WILL PROCLIP BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, INDIRECT, SPECIAL, PUNITIVE, OR EXEMPLARY DAMAGES, INCLUDING ATTORNEY FEES ARISING OUT OF THE USE OF OR THE INABILITY TO USE THE PRODUCTS, OR FOR ANY CLAIM BY ANY OTHER PARTY, EVEN IF PROCLIP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Regulatory information: www.proclipusa.com/regulatory.html

ProClip USA, LLC

4915 Voges Road • Madison, WI 53718 • USA
Office: +1 608-807-5230 • Fax: +1 920-372-0066
Toll free: 800-296-3212 • www.proclipusa.com